



DIGITAL SIGNAGE

Product Manual

TMN (TM32N, TM43N, TM55N, TM65N, TM75N, TM85N, TM98N)
TBN (TB43N, TB55N, TB65N, TB75N)

MULTI PRODUCT USER MANUAL

- This manual is for TCL multiple models.
- This is manual for website and might miss essential contact information which is available in manual provided with DIGITAL SIGNAGE in the carton box.

REPORTING SAFETY ISSUES

If you identify a safety defect or have concerns about product safety:

Contact the TCL Customer Support team via the form at our website click Support then contact us for DIGITAL SIGNAGE.

Email: sales.tclbusiness@tcl.com

website: <https://www.tcl.com/global>

Dear customers, as this device is multi-functional, you should read the Product Manual carefully before use, in order to fully and effectively enable all functions of this device. The functions of the product in kind shall prevail. Functional differences due to product upgrades are subject to no prior notice.

CONTENTS

SAFETY WARNINGS	3	DEVICE APPEARANCE	27
DEVICE STABILITY	5	BASIC FUNCTIONS OF DEVICE	31
SAFETY SIGNS	6	MULTIMEDIA, NETWORK DOWNLOAD FUNCTION QUESTIONS AND ANSWERS	32
CAUTION	7	FAULT ANALYSIS AND TROUBLESHOOTING HDMI	33
ACCESSORIES	8	DISCLAIMER	34
LIST OF OPTIONAL ACCESSORIES	9	TECHNICAL SPECIFICATIONS OF THE COMPLETE DEVICE	36
FUNCTIONS AND FEATURES	10	IMPORTANT INFORMATION	37
WALL MOUNTING	11		
INSTALLATION OF MOVABLE BRACKET	15		
WALL MOUNTING SPECIFICATIONS	16		
REMOTE CONTROL KEYS AND INSTRUCTIONS	17		
CONNECTION	19		

SAFETY WARNINGS

 Please read and understand the following precautions carefully before using this product, and keep the Manual properly for future inquiry.

The device shall be kept in a well-ventilated environment.

- No vent holes shall be covered with items such as newspapers, tablecloths and curtains that may impede ventilation.
- Do not place exposed flame sources, such as lit candles, on the device.

The device shall not be exposed to drops or splashes, and no liquid filled objects such as vases shall be placed on the device.

To prevent tipping hazards, make sure that all edges of the device within the bracket, and do not place the device on any unstable or non-weight bearing carts, racks or tables.

The device must be securely secured to the wall by professionals.

Devices of Class I construction (typically with a three-core power cord that needs to be grounded) should be connected to the grid power output socket with protective ground.

When the multimedia system having the device of Class I construction (typically with a three-core power cord that needs to be grounded) and the device of Class II construction (typically with a two-core power cable without the need to be grounded specially) is connected to the power supply, reliable connection of the protective ground of the device of Class I construction shall be ensured. Devices that need to be connected to the communication network and those that need to be connected to the wired network in the multimedia system must meet the requirements for isolation from the communication network and the wired network. The power plug or appliance coupler serves as the disconnecting device of the device and shall remain readily accessible.

Terminals marked with  are live and dangerous, and shall be connected to external wires by trained personnel or to ready-made leads or cords. After the device is moved from a low temperature area to a warm area, the temperature difference may cause water beads in the device. The device shall be powered on only after water beads there in are fully evaporated and disappeared. Batteries (packs or assembled batteries) shall be kept from sunlight, fire, or similar overheating environment. Waste batteries should be recycled by the local recycling method for environment protection.

The symbol  indicates the use of fuses on the neutral line of single-phase equipment that is permanently connected or equipped with non reversible plugs. After the fuse is activated, components that are still live in the equipment may pose a danger during maintenance.

SAFETY WARNINGS

Attention

If the battery is not replaced properly, there is a risk of explosion and can only be replaced with batteries of the same or equivalent type.

Warning

To prevent injury, the device must be securely fixed to the wall according to the installation instructions.

The wired network antenna connected to this device must be isolated from the protective grounding, otherwise it may cause fire and other hazards!

DEVICE STABILITY

The device may tip over, causing serious personal injury or death.

Never put the device in an unstable position. The device may tip over, causing serious personal injury or death.

Many injuries, particularly to children, can be avoided by taking simple preventive measures such as the following:

- Use cabinets or supports recommended by the device manufacturer.
- Only furniture that can safely support the device can be used.
- Ensure that the device does not protrude over the edge of the supporting furniture.
- Do not place the device on high furniture (such as cabinets or bookshelves) without securing both the furniture and the device to appropriate supports.
- Do not place the device on fabrics or other materials laid between the device and furniture.
- Educate children about the danger of climbing on furniture to reach for the device or its controls.

If an existing device needs to be retained and relocated, the aforementioned precautions should also be taken into consideration.

SAFETY SIGNS

 Attention should be paid to the following safety signs on the device:




It is only suitable for safe use in areas below an altitude of 5000m.




It is only suitable for safe use in non tropical climate conditions.


⚠ CAUTION

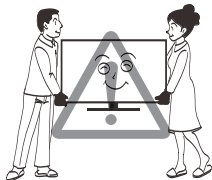


When moving the device, make sure the plug is removed from the power socket and disconnect the audio/video cables and all fixed cables. At least two people are needed for moving the device. The device can be moved upright only.

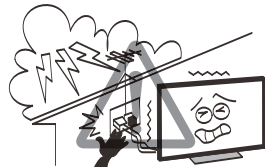

Do not touch the power cord or other connected wires and cables in case of thunder or lightning strikes.

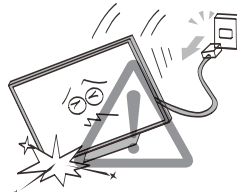

Turn off the device immediately and remove the power plug from the socket if the device falls off or the casing is damaged. Contact the service technicians for inspection and maintenance.

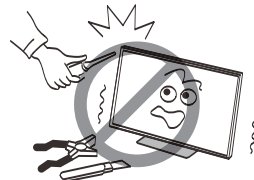

Do not repair, modify or disassemble the device without permission. In case of any faults, contact the service technicians for inspection and maintenance.



Turn off the device immediately and remove the power plug from the socket when the device breaks down or gives off smoke or a peculiar smell. Contact the service technicians after confirming that the smoke and smell have disappeared.



Unplug the power cord before cleaning the device. The device cannot be cleaned by gasoline, thinner or solvents that may deform the casing or damage the finish. There may be stains when rubber or vinyl products come into contact with the device for a long time. If the casing becomes dirty, wipe it with a soft dry cloth. When cleaning the LCD, gently wipe the LCD surface with the soft dry cloth. Note: Do not wipe the display and casing with a wet cloth.



 
When the device is not in use for a long period of time (e.g., on vacation or travel), unplug the power cord from the power socket. The device is not fully disconnected from the power supply even when in standby mode, and will still draw a small amount of current.



Do not stand on or climb on the device.

■ ACCESSORIES

Check whether the following accessories can be found in the packing box, if not, contact your local dealer.




Monitor Unit



Remote Control




Batteries

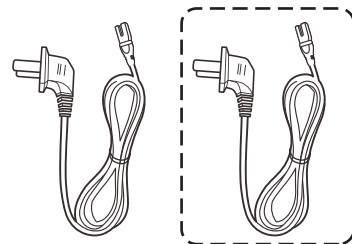

Power Cables



 Product Manual




Warranty Card


- | | |
|---|-----------------|
| ☐ Monitor Unit | x1 |
| ☐ Remote Control | x1 |
| ☐ Batteries | x2 |
| ☐ Power Cables | NA: x1 / EU: x2 |
| ☐ Product Manual | x1 |
| ☐ Warranty Card | x1 |

Note: The accessories in kind shall prevail and are subject to change without notice.

▣ LIST OF OPTIONAL ACCESSORIES

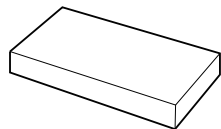


Mount Set

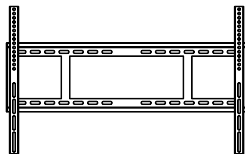


Bracket



 Magnetic Picture Frame



IR Extension Cord

 

Headphone Jack to DB9 RS232
OUT Cable

Note: The above accessory illustrations are for reference only, and the actual product may vary.

FUNCTIONS AND FEATURES

Functions

- Commercial-grade quality standard, 7*24-hour continuous operation, IP5X dustproof certification, a wide range of applications;
- True standby technology and built-in RTC clock module facilitate ultra-low power consumption and scheduled power on/off functions to promote energy conservation and environmental sustainability. Anti-burn-in screen settings significantly enhance the screen's durability and lifespan;
- Wired network and Wi-Fi (including enterprise Wi-Fi) connections, along with domain name user authentication login, ensure efficient wireless cooperation;
- Multiple interfaces: 2-channel USB , 2-channel HDMI IN, 1-channel Audio OUT, 1-channel RS232 IN, 1-channel RS232 OUT, 1-channel RJ45, 1-channel IR IN and 1-channel DP (only for TM series)
- High hardware configuration, Android 13, 3+16G(TB series)/4+32G(TM series), ultra-large memory, smooth operation without jamming, support RS232 interface, convenient for users to realize centralized control function;
- Multiple mainstream media formats:
Picture decoding: JPG, JPEG, BMP and PNG
Audio decoding: MP2/MP3/WAV/OGG/FLAC/APE/AAC/M4A/AIF/AIFF/ALAW/ALAC/WMA
Video decoding: DAT,MPG, TS,MPEG, M2V, TP, VOB,AVI, MP4, MOV, 3GP,OGM, 3G2, MKV, M2TS, MTS, M4V, FLV, F4V, PMP,ASF,RM, RMVB,H.264,AVS

Features


- Ultra-slim and minimalist body design, uniformly narrow bezels, and stylish appearance;
- The central VESA holes support horizontal/vertical installation and can be matched with an ultra-thin mount to realize seamless wall installation. Additionally, the accompanying magnetic picture frame delivers the ultimate artistic experience of the product;
- Ultra-HD 4K resolution, commercial AG25% anti-glare screen, NTSC 72% (TB series)/DCI-P3 93% (TM series), high color gamut, rich and delicate picture details, restoring real colors;
- High brightness 500nit (TM series), clearer and brighter picture than TV, more suitable for commercial scenarios than traditional TV;
- Automatic white balance and image quality tuning technology, difference for multi-screen display;
- Pure Android system ensures immersive experience;
- Built-in TCL EShow multimedia information release system realizes remote information release and remote management of the device;
- Support import of videos, audio, and pictures via USB drive, local stand-alone playback, and automatic playback upon startup;
- Open API interface ensures compatibility with customer software and customer applications can be automatically activated upon startup.




Note: The performance of this product is continuously being improved. All product specifications (including appearance and color) are subject to the actual product and may be updated without prior notice.

WALL MOUNTING


32"

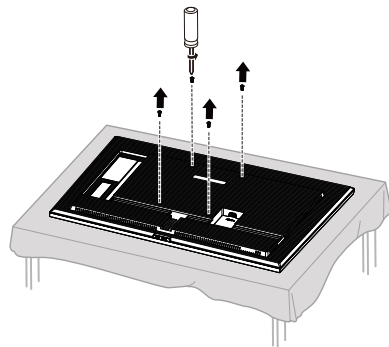

- 1 Remove the screws from the mounting holes of the rear cover mount.
Note: Some models may come with two screws, four screws, or no screws at all.

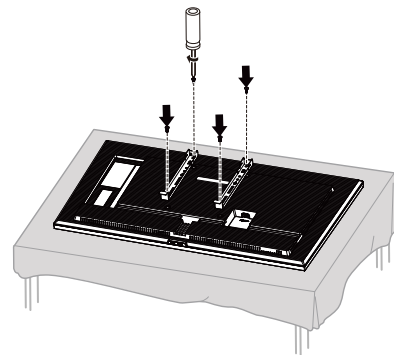


- 2 Use VESA screws to lock the mount to the complete device (top VESA holes).

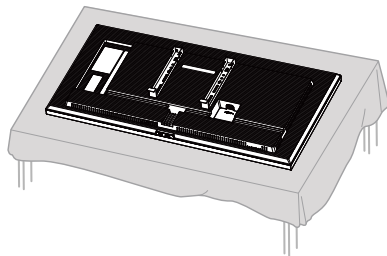

- 3 The mount installation is completed.



- 4 Hang the device on the wall according to the mount instructions.

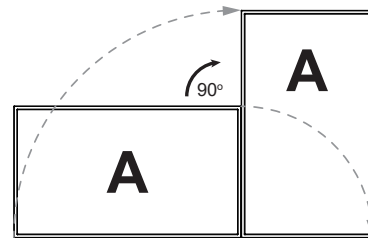


Horizontal installation

Vertical installation


Notes: 1. The steps are for illustration only, and the product appearance shall be subject to the physical object; 2. The complete device does not include a mount as a standard accessory. If needed, please purchase it separately and refer to the corresponding mount instructions for proper setup.

❑ WALL MOUNTING


43" & 55" & 65" & 75"

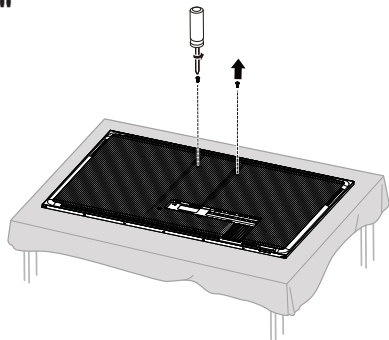

- ❶ Remove the screws from the mounting holes of the rear cover mount.
Note: Some models may come with two screws, four screws, or no screws at all.

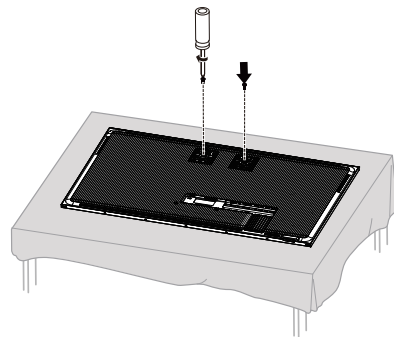


- ❷ Use VESA screws to lock the mount to the complete device (top VESA holes).

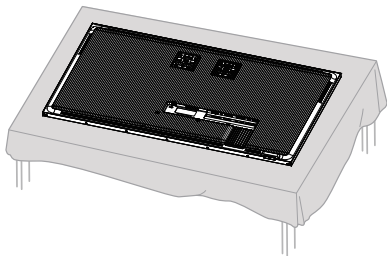

- ❸ The mount installation is completed.



- ❹ Hang the device on the wall according to the mount instructions.

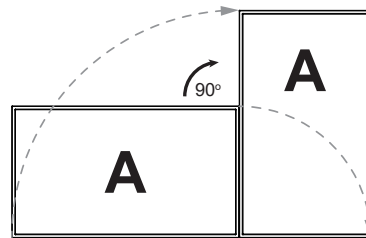


Horizontal installation

Vertical installation


Notes: 1. The steps are for illustration only, and the product appearance shall be subject to the physical object; 2. The complete device does not include a mount as a standard accessory. If needed, please purchase it separately and refer to the corresponding mount instructions for proper setup.

WALL MOUNTING


85"

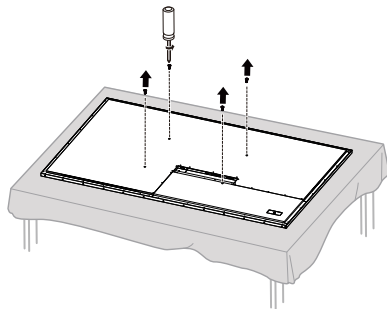

- 1 Remove the screws from the mounting holes of the rear cover mount.
Note: Some models may come with two screws, four screws, or no screws at all.

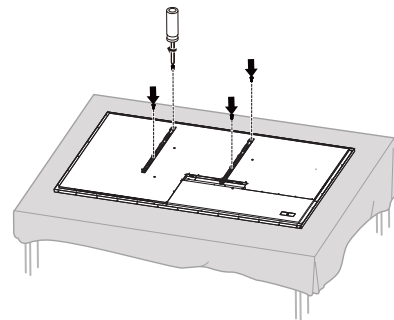


- 2 Use VESA screws to lock the mount to the complete device (top VESA holes).

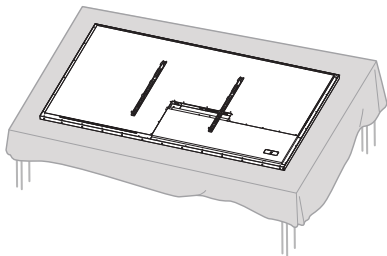

- 3 The mount installation is completed.



- 4 Hang the device on the wall according to the mount instructions.

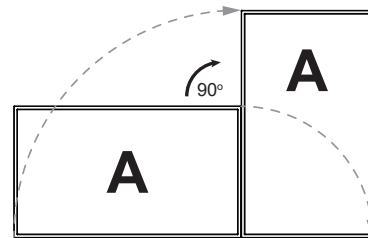


Horizontal installation

Vertical installation


Notes: 1. The steps are for illustration only, and the product appearance shall be subject to the physical object; 2. The complete device does not include a mount as a standard accessory. If needed, please purchase it separately and refer to the corresponding mount instructions for proper setup.

WALL MOUNTING


98"

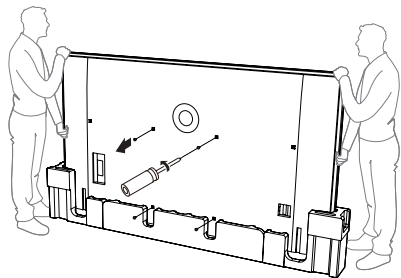


- 1 Remove the screws from the mounting holes of the rear cover mount.
Note: Some models may come with two screws, four screws, or no screws at all.

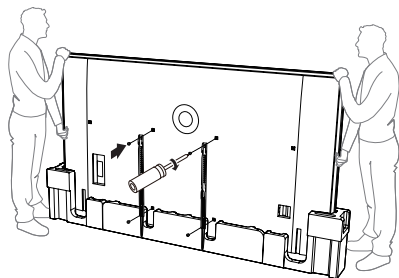

- 2 Use VESA screws to lock the mount to the complete device.

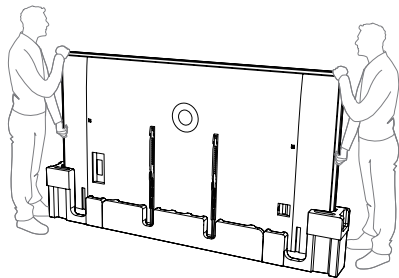

 
- 3 The mount installation is completed.




- 4 Hang the device on the wall according to the mount instructions.

Notes: 1. The steps are for illustration only, and the product appearance shall be subject to the physical object; 2. The complete device does not include a mount as a standard accessory. If needed, please purchase it separately and refer to the corresponding mount instructions for proper setup.


■ INSTALLATION OF MOVABLE BRACKET 98"

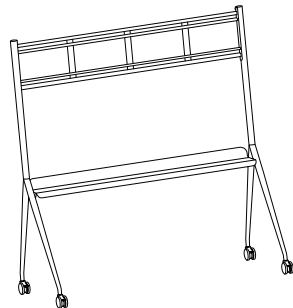


- 1 Place the assembled mobile bracket components on the ground.

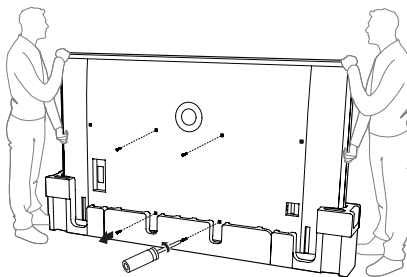


- 2 Remove the screws from the mounting holes of the rear cover mount.

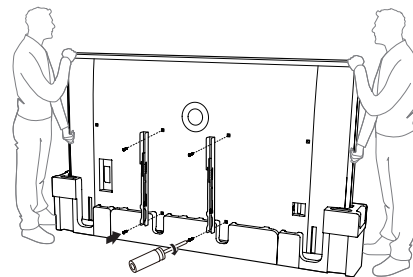


- 3 Use VESA screws to lock the mount to the complete device.

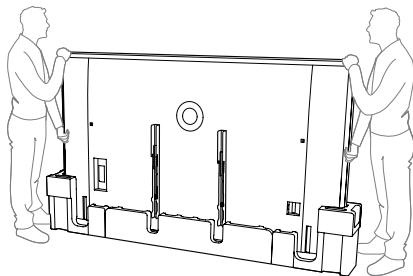

- 4 The mount installation is completed.

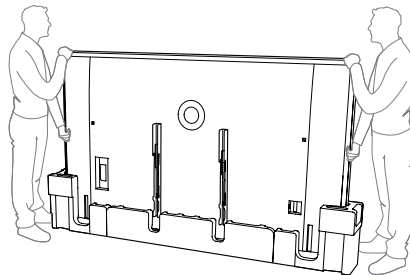

- 5 Attach the entire machine components tightly onto the movable bracket and use a Phillips screwdriver to lock the screws.

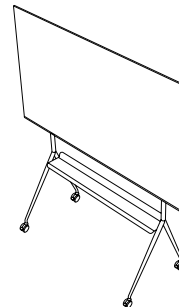


- 6 Installation of movable bracket completed.


Notes: 1. The steps are for illustration only, and the product appearance shall be subject to the physical object; 2. The complete device does not include a mount as a standard accessory. If needed, please purchase it separately and refer to the corresponding mount instructions for proper setup.

WALL MOUNTING SPECIFICATIONS

VESA Hole Pattern Diagram

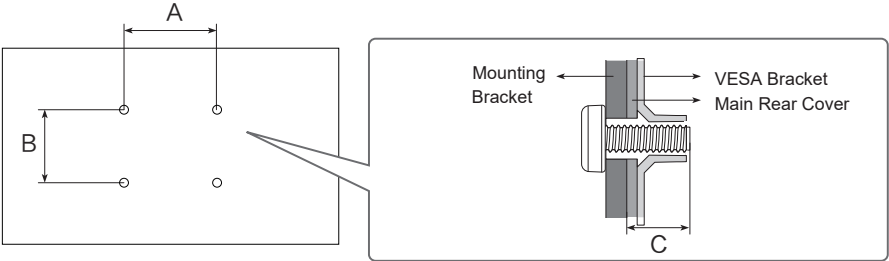


Backside of the Device

 


Model Name	VESA screw hole specs (A * B) in millimeters	C(mm)	Standard Screw	Quantity
TM32N	150 x 200	20	M6	4
TM43N / TB43N	300 x 300	14.5		2
TM55N / TB55N	200 x 400			
TM65N / TB65N	300 x 400			
TM75N / TB75N	300 x 600			
TM85N	600 x 400	7	M8	4
TM98N	600 x 500	20		

■ REMOTE CONTROL KEYS AND INSTRUCTIONS


Schematic Diagram of Remote Control

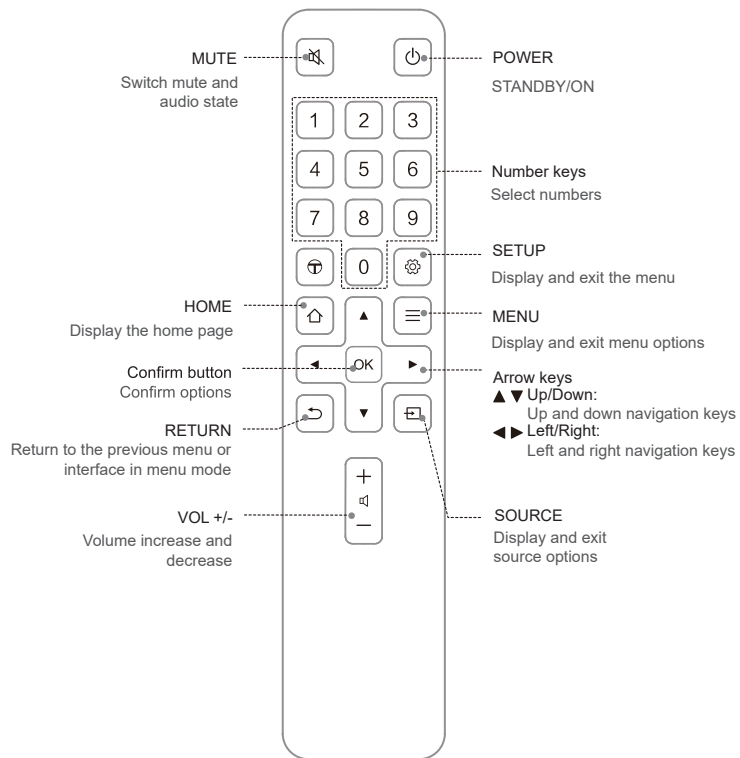


Installation Diagram of Remote Control Batteries

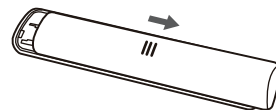 

 1. Push aside the battery compartment cover;

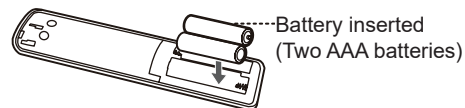

 2. Place two AAA batteries accordingly to the polarity marked in the battery compartment;

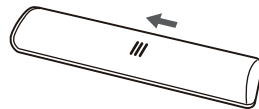

3. Push to close the battery compartment cover.

Note: For reference only, which may vary for different models.


■ REMOTE CONTROL KEYS AND INSTRUCTIONS

Precautions for use of remote control:


- When operating the main unit with the remote control, aim at the screen's reception area. If the remote control is unresponsive, you can pull down the key box and direct the box for remote operation. If there is an obstacle between the main unit and the remote control, it may result in malfunction.
 - To ensure optimal performance of the remote control, please replace the battery immediately if abnormal operation is found after long-time use of the battery.
 - Do not mix new and old batteries or batteries of different types.
 - When the battery power is low, it may leak electrolytes, which can damage the remote control. Please replace the battery immediately once it is found that the power is low or the remote control does not work.
 - If the remote control is not used for a long time, please take out the battery to prevent electrolyte leakage from the battery.
 - When the remote control is not in use, please store it in a cool and dry place. Avoid direct sunlight, exposure to heat, and storing it in damp areas.
- The system can activate the remote control lock, which will prevent infrared remote control from operating the device. To unlock, please try the following operations:
 1. Press the "1003" button followed by the "OK" button. After seeing the prompt to unlock the remote control, attempt to operate it.
 2. Press the "Up/Down/Left/Right" button followed by the "OK" button. After seeing the prompt to unlock the remote control, attempt to operate it.

CONNECTION 32"

Device terminal interface

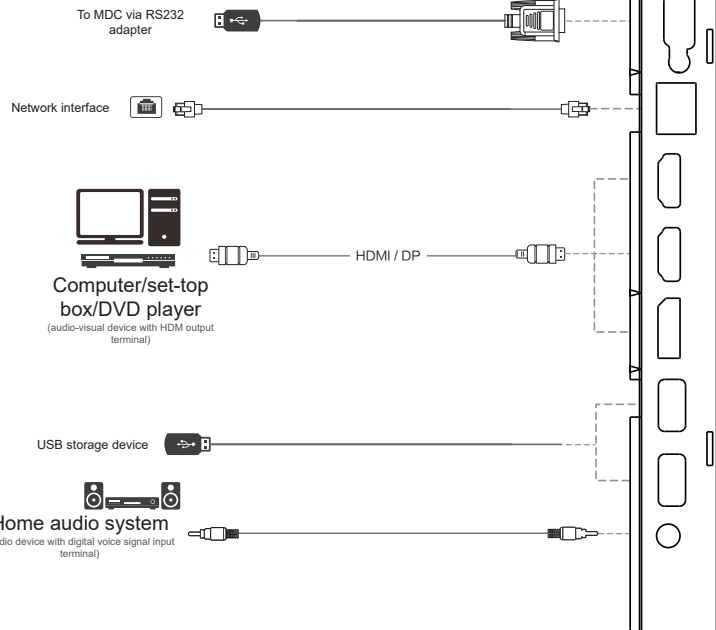

RS232
RJ45
HDMI1
HDMI2
DP IN
USB1(A)
USB10(A)
AUDIO OUT

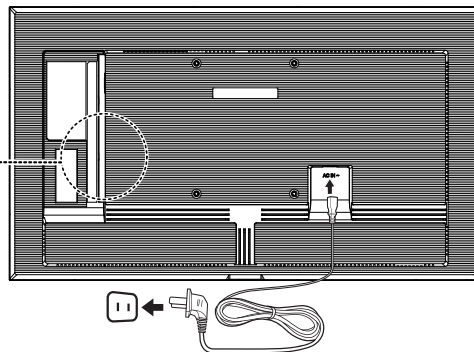



Please place the power cord in the first trunking on the left, and arrange other external device wires sequentially from right to left in the trunking.

Tips:

1. The HDMI port supports the HDMI2.1 standard, HDMI1/2 supports 4K@60Hz. However, there may be issues with external HDMI devices if their version is too low, which could result in malfunction.
2. The DP interface is only supported in the TM series, with a capability of 4K@60Hz. Actual performance may vary depending on the specific product.

CONNECTION **43" & 55" & 65" & 75"**

Device terminal interface

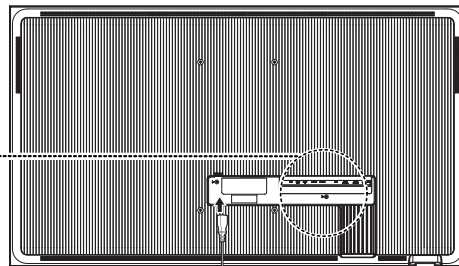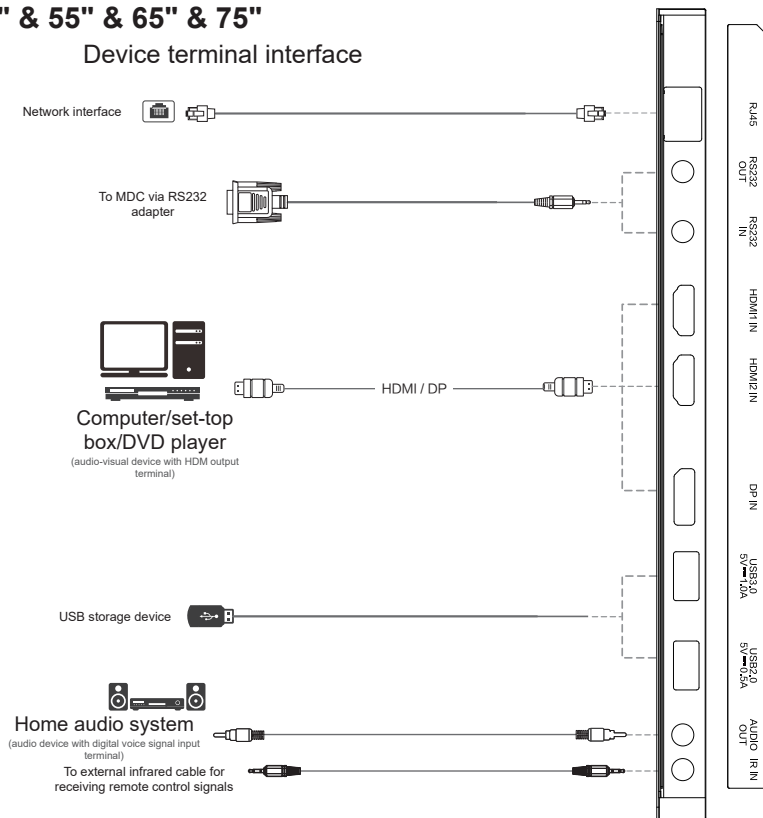


Please place the power cord in the first trunking on the left, and arrange other external device wires sequentially from right to left in the trunking.

Tips:

1. The HDMI port supports the HDMI2.1 standard, HDMI1/2 supports 4K@60Hz. However, there may be issues with external HDMI devices if their version is too low, which could result in malfunction.

2. The DP interface is only supported in the TM series, with a capability of 4K@60Hz. Actual performance may vary depending on the specific product.

CONNECTION 85"


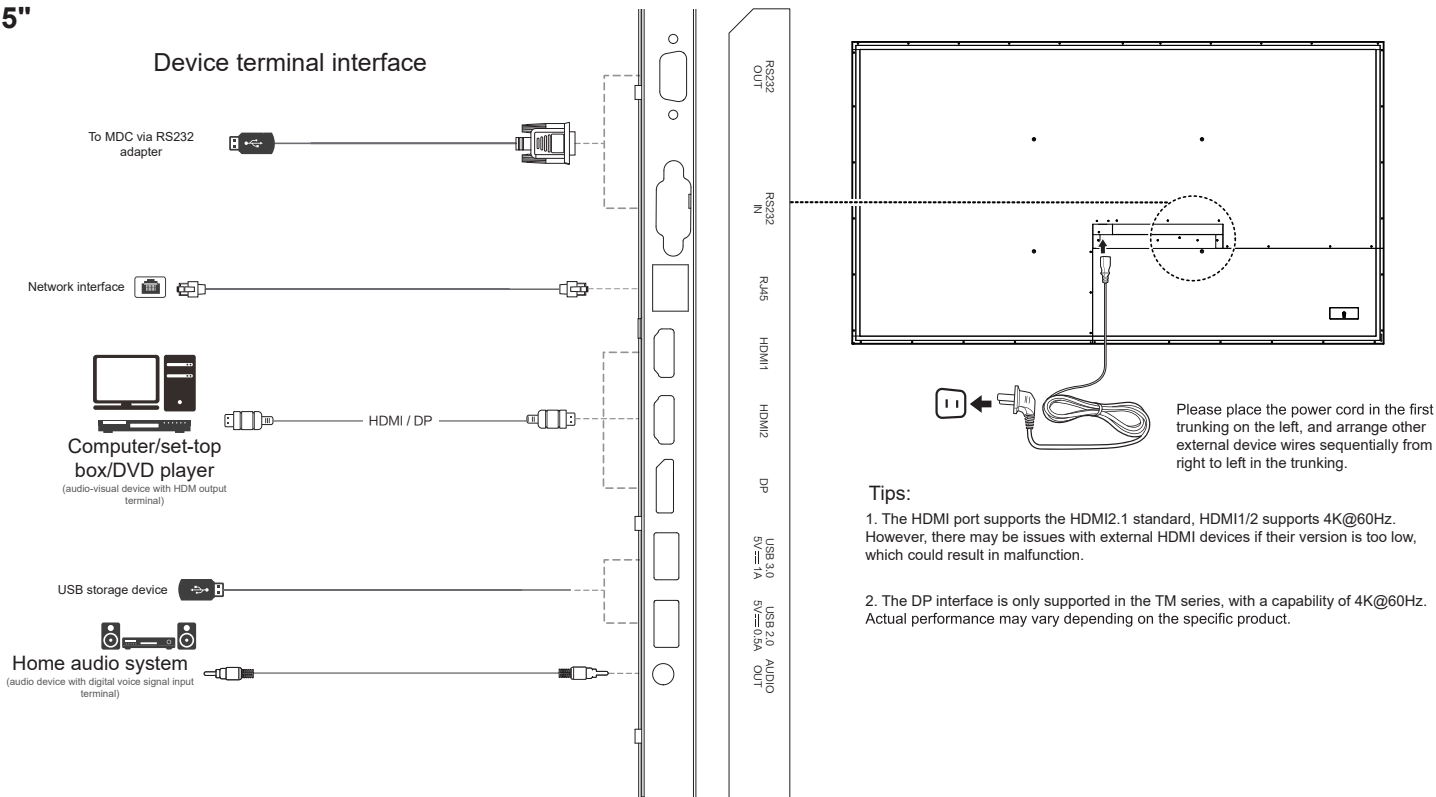


Tips:

1. The HDMI port supports the HDMI2.1 standard, HDMI1/2 supports 4K@60Hz. However, there may be issues with external HDMI devices if their version is too low, which could result in malfunction.
2. The DP interface is only supported in the TM series, with a capability of 4K@60Hz. Actual performance may vary depending on the specific product.

CONNECTION 98"

Device terminal interface

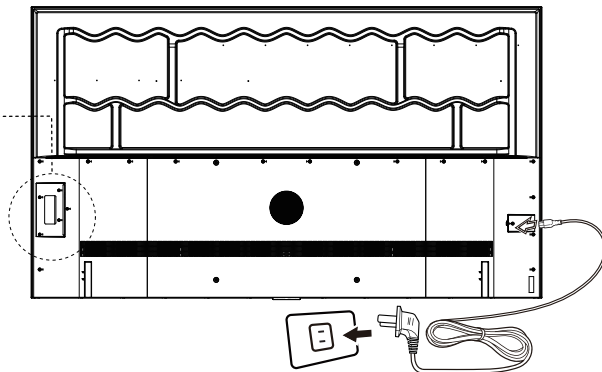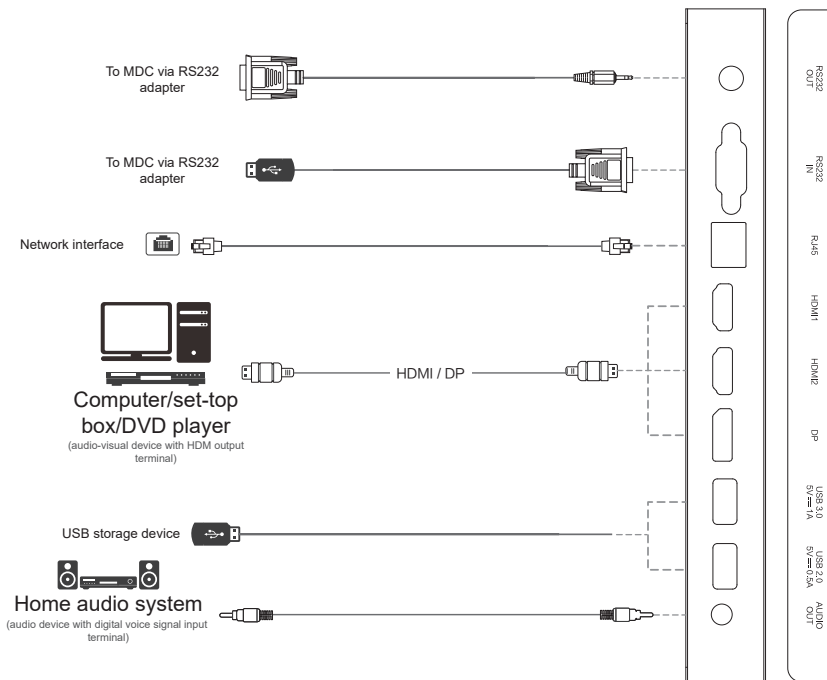


Tips:

1. The HDMI port supports the HDMI2.1 standard, HDMI1/2 supports 4K@60Hz. However, there may be issues with external HDMI devices if their version is too low, which could result in malfunction.
2. The DP interface is only supported in the TM series, with a capability of 4K@60Hz. Actual performance may vary depending on the specific product.


CONNECTION

32"

Schematic Diagram of Wired Network Connection

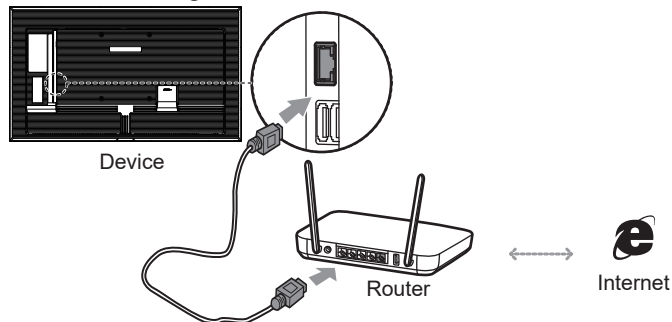

Schematic Diagram of Wireless Network Connection

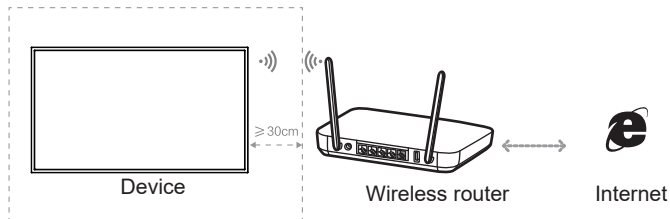

Tips:

When the device experiences intermittent blurred-screen display issues during use, it is recommended to reposition the router at a distance of approximately 30 cm from the device to determine if the issue resolves, thereby eliminating potential interference from the router.

Network connection and settings

This device offers two connection options for users to choose from.

- **Wired network connection and settings**

If the user's network can dynamically obtain an IP address, select "Automatically Obtain IP Address" for network connection.

If a static IP address needs to be input, select "Manually Set IP Address". After entering the manual IP address input interface, press the OK button to call out the soft keyboard, press the Up/Down/Left/Right button to select numbers, and then press the OK button to confirm the input. After entering each set of numbers, proceed to the next input field until all entries are complete. Press the "Return" button on the remote control to exit the soft keyboard, then select "Connect" to initiate the automatic network connection.


- **Wireless network settings**

When utilizing Wi-Fi to connect to a wireless network, the network connection can be established by adjusting the settings within this menu. Select "Settings → All Settings → Network → Wireless Network → Wi-Fi Switch".


❑ CONNECTION

43" & 55" & 65" & 75"

Schematic Diagram of Wired Network Connection

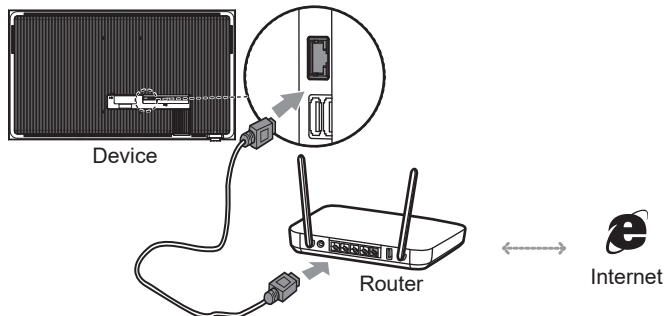

Schematic Diagram of Wireless Network Connection

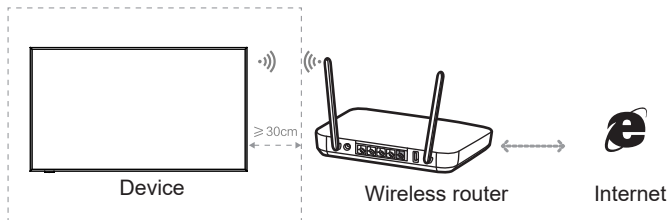

Tips:

When the device experiences intermittent blurred-screen display issues during use, it is recommended to reposition the router at a distance of approximately 30 cm from the device to determine if the issue resolves, thereby eliminating potential interference from the router.

Network connection and settings

This device offers two connection options for users to choose from.

- **Wired network connection and settings**

If the user's network can dynamically obtain an IP address, select "Automatically Obtain IP Address" for network connection.

If a static IP address needs to be input, select "Manually Set IP Address". After entering the manual IP address input interface, press the OK button to call out the soft keyboard, press the Up/Down/Left/Right button to select numbers, and then press the OK button to confirm the input. After entering each set of numbers, proceed to the next input field until all entries are complete. Press the "Return" button on the remote control to exit the soft keyboard, then select "Connect" to initiate the automatic network connection.


- **Wireless network settings**

When utilizing Wi-Fi to connect to a wireless network, the network connection can be established by adjusting the settings within this menu. Select "Settings → All Settings → Network → Wireless Network → Wi-Fi Switch".


CONNECTION

85"

Schematic Diagram of Wired Network Connection

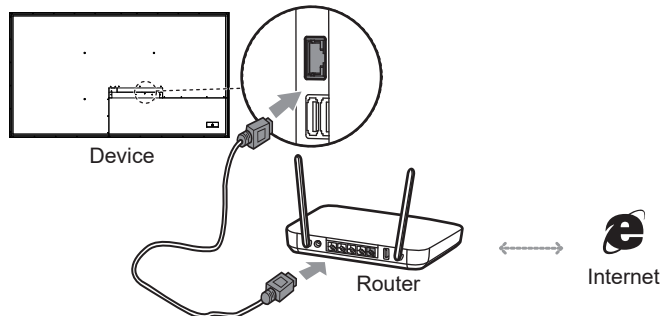

Schematic Diagram of Wireless Network Connection

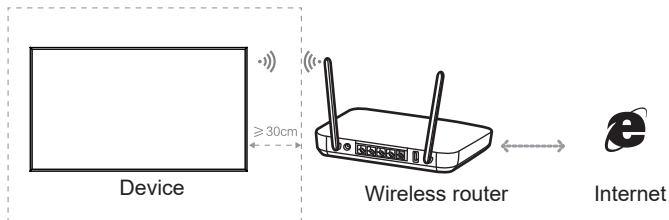

Tips:

When the device experiences intermittent blurred-screen display issues during use, it is recommended to reposition the router at a distance of approximately 30 cm from the device to determine if the issue resolves, thereby eliminating potential interference from the router.

Network connection and settings

This device offers two connection options for users to choose from.

- **Wired network connection and settings**

If the user's network can dynamically obtain an IP address, select "Automatically Obtain IP Address" for network connection.

If a static IP address needs to be input, select "Manually Set IP Address". After entering the manual IP address input interface, press the OK button to call out the soft keyboard, press the Up/Down/Left/Right button to select numbers, and then press the OK button to confirm the input. After entering each set of numbers, proceed to the next input field until all entries are complete. Press the "Return" button on the remote control to exit the soft keyboard, then select "Connect" to initiate the automatic network connection.


- **Wireless network settings**

When utilizing Wi-Fi to connect to a wireless network, the network connection can be established by adjusting the settings within this menu. Select "Settings → All Settings → Network → Wireless Network → Wi-Fi Switch".


CONNECTION

98"

Schematic Diagram of Wired Network Connection

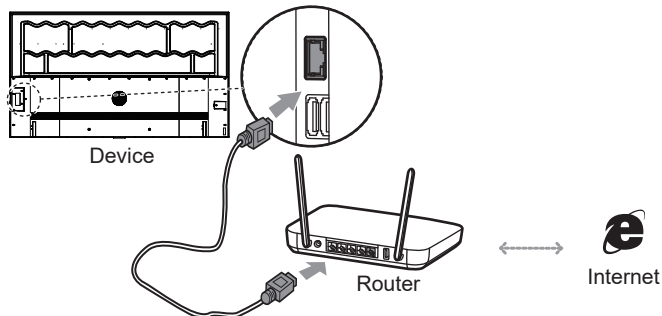

Schematic Diagram of Wireless Network Connection

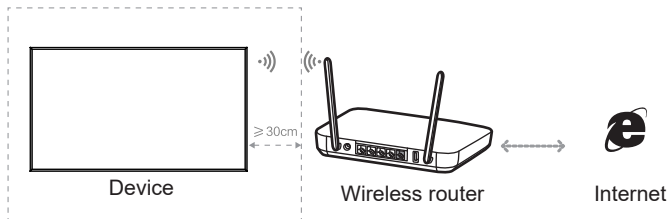

Tips:

When the device experiences intermittent blurred-screen display issues during use, it is recommended to reposition the router at a distance of approximately 30 cm from the device to determine if the issue resolves, thereby eliminating potential interference from the router.

Network connection and settings

This device offers two connection options for users to choose from.

- **Wired network connection and settings**


If the user's network can dynamically obtain an IP address, select "Automatically Obtain IP Address" for network connection.

If a static IP address needs to be input, select "Manually Set IP Address". After entering the manual IP address input interface, press the OK button to call out the soft keyboard, press the Up/Down/Left/Right button to select numbers, and then press the OK button to confirm the input. After entering each set of numbers, proceed to the next input field until all entries are complete. Press the "Return" button on the remote control to exit the soft keyboard, then select "Connect" to initiate the automatic network connection.


- **Wireless network settings**

When utilizing Wi-Fi to connect to a wireless network, the network connection can be established by adjusting the settings within this menu. Select "Settings → All Settings → Network → Wireless Network → Wireless network".

DEVICE APPEARANCE **32"**

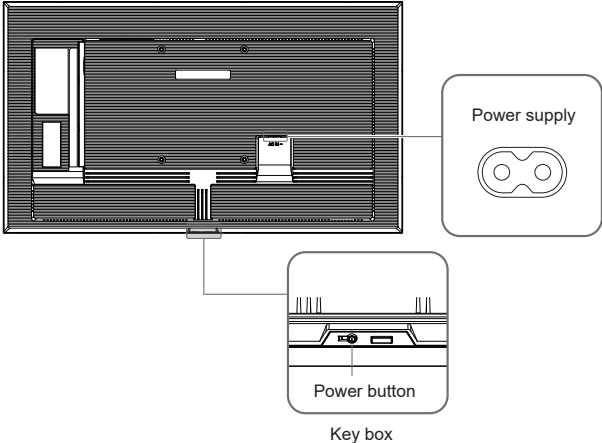


Key box		No matter whether the key box extends from the bottom of the product, it does not affect the use of the power button.
Power button		Turn on/off the device.

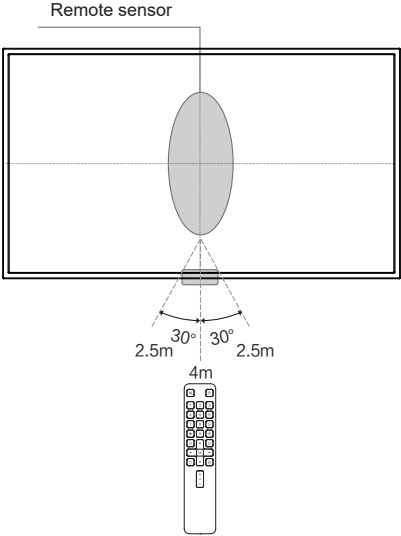


Remote sensor on the screen: Within a distance of 2.5 m to 4 m from the sensor on the product, operate the remote control at an angle of up to 30° to the left and right.

DEVICE APPEARANCE

43" & 55" & 65" & 75"

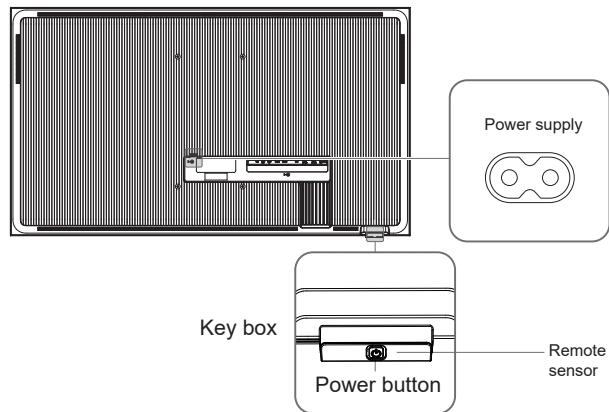


Remote sensor	Press the button on the remote control pointing to the sensor at the front of the product to perform the corresponding function. ■ Using other display devices in the same space as the remote control of this product may cause those devices to be controlled unintentionally.
	 Pull out the key box and use the remote control for remote operation.
Key box	 No matter whether the key box extends from the bottom of the product, it does not affect the use of the power button.
Power button	Turn on/off the device.

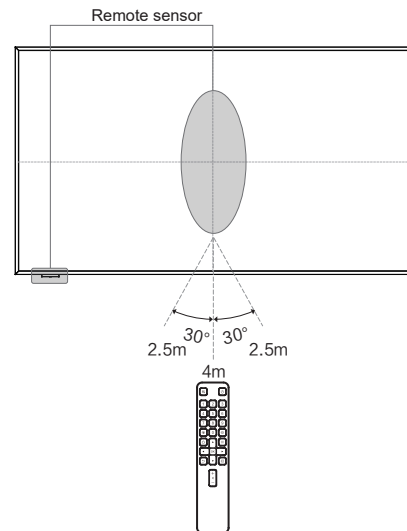


Remote sensor on the screen: Within a distance of 2.5 m to 4 m from the sensor on the product, operate the remote control at an angle of up to 30° to the left and right.

Remote sensor on the bottom: Within a distance of 7 m to 10 m from the sensor on the product, operate the remote control at an angle of up to 30° to the left and right.

DEVICE APPEARANCE **85"**

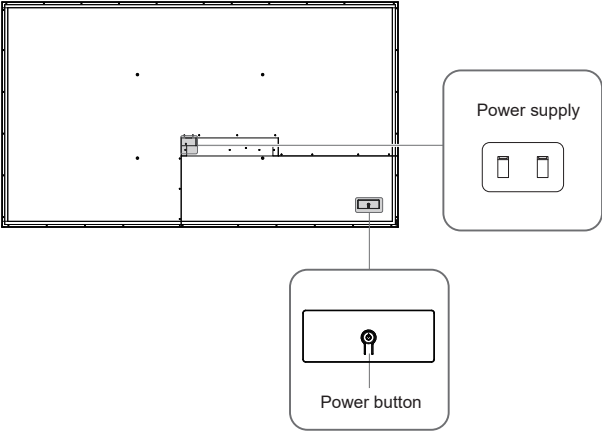


Remote sensor	Press the button on the remote control pointing to the sensor at the front of the product to perform the corresponding function. ■ Using other display devices in the same space as the remote control of this product may cause those devices to be controlled unintentionally.
Power button	Turn on/off the device.

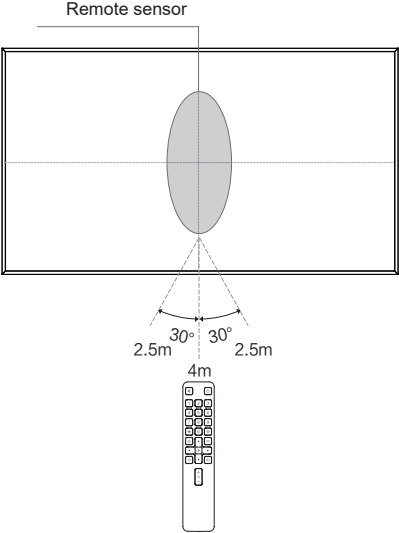

Remote sensor on the screen: Within a distance of 2.5 m to 4 m from the sensor on the product, operate the remote control at an angle of up to 30° to the left and right.

DEVICE APPEARANCE

98"

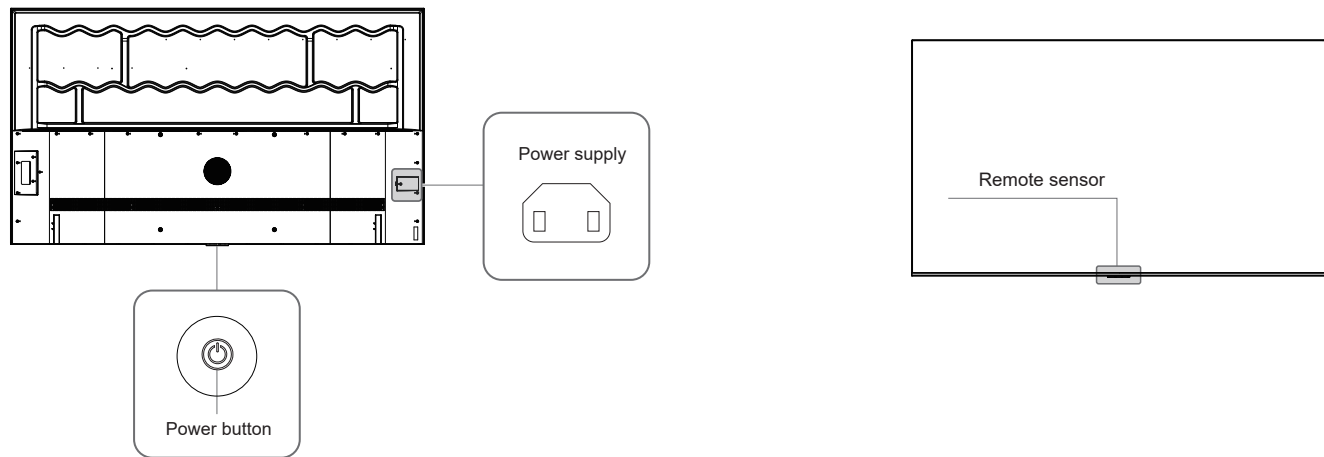

Remote sensor	Press the button on the remote control pointing to the sensor at the front of the product to perform the corresponding function. Using other display devices in the same space as the remote control of this product may cause those devices to be controlled unintentionally.
Power button	Turn on/off the device.

■ BASIC FUNCTIONS OF DEVICE

- Startup

Connect the AC power supply, and the device will start up automatically. When the device is on standby, press the ⏻ button on the remote control or device to start up the device.

- Shutdown

When the device is turned on, short press the ⏻ button on the remote control to enter the standby state; short press the Standby button on the device to enter the standby state.

Note: In case of power failure or out-of-service for a long time, please unplug the power cord from the socket in time.

- Function entry

Enter the home page of the device, and press the Left/Right button on the remote control to select different function entries.

When the focus of the remote control moves to these function entries, relevant applications will be displayed on the interface.

■ MULTIMEDIA, NETWORK DOWNLOAD FUNCTION QUESTIONS AND ANSWERS

1. What should I pay attention to in software upgrade?

A: (1) Do not power off during the upgrade process; (2) Do not use the remote control for any operation during the upgrade process; (3) The upgrade process may take a long time (generally about 5 minutes), but the process of downloading the upgrade APK through the network is affected by the network, so it cannot be accurately estimated, so you need to wait patiently.

2. Why is there no obvious change after the software upgrade?

A: Sometimes the software upgrade is to add new functions, and sometimes it is to improve the performance of the device. Therefore, the content of each upgrade is different. After the upgrade, new functions may be added and there are obvious changes in the interface. Or there may be no changes in the interface and no added functions, but only improved performance.

3. What if I accidentally touch the power supply during the upgrade process and terminate the upgrade?

A: Specific treatment methods: if there is a USB disk inserted in the device, please do not remove it, with the USB disk restart, should be able to upgrade; If you didn't start the upgrade with the USB disk, you also need to turn off the device and restart it to see whether it is normal; If you still can't upgrade again, please contact the customer service center.

4. Why does the USB device is not detected when the USB drive is plugged in?

A: It may be because the mobile hard disk is faulty or the power supply is insufficient. If it is a mobile hard disk fault, the mobile hard disk needs to access to the computer, then repair the mobile hard disk. Specific steps: first, find the disk on the computer, right-click the mobile hard disk, select "properties" in the pop-up box, and then select "tools". After that, begin to repair the selected mobile hard disk or USB disk. Secondly, if the mobile hard disk power supply is insufficient (the mobile hard disk will have, "click" sound), it will cause the hard disk cannot work normally. A voltage of 5V and current of 500MA-700MA are required to operate USB devices. If the power supply is insufficient, it will cause to read/write errors or even unrecognizable on the mobile hard drive. The device will work fine with USB in this range. If a power shortage occurs, plug both plugs from one end of the USB cable into the USB portal the same time to enhance the power supply. In addition, you can also use an external power supply (please pay attention to choose a suitable model). Please note that you must start the machine before inserting the USB disk.

❑ FAULT ANALYSIS AND TROUBLESHOOTING HDMI

HDMI Failure

1. Check whether the connection cable from the device to the device is plugged in place or re-plug the HDMI cable.
2. Check whether the resolution of the external device meets the requirements of the device.

No Picture No Sound

The power outlet switch is not turned on.
Poor connect of power line.
Check the signal source.

The Image Has Messy Ripples

Usually cause by local interference. Such as cars, fluorescent lamps, hair dryers, etc.

No Color

A black screen in computer mode (that is, when it is used as a computer monitor) may be due to the unrecognizable resolution set by the computer. It is recommended to change to the optimal resolution or other Windows system standard resolutions.

Normal Picture, No Sound

Maybe the volume is not turned on, press the volume + key: if there is no physical volume key, adjust the volume in the system settings.

With Sound But No Picture

Adjust the brightness analog amount.

Spark Interference

Black dots, horizontal stripes or images appear to sway and flap. These phenomena are often cause by the ignition system, neon lights, the interference of electric drill or other electronic device.

DISCLAIMER

I. Please keep the Warranty Bill properly. This Warranty Bill and the purchase invoice together serve as the warranty certificate for free maintenance service within the warranty period.

I. Valid certificate of warranty:

1. In case of product failure within the warranty period, consumers shall enjoy free maintenance service by the purchase invoice and the Warranty Bill. To enjoy the free maintenance service, the serial number of the product to be repaired must be consistent with that of the product on the Warranty Bill.

In absence of a purchase invoice, the date of manufacture indicated by the serial number is postponed by 30 days as the start of the warranty period. Without the purchase invoice and the Warranty Bill, consumers cannot enjoy free maintenance service but are charged for service.

2. Installation and debugging records cannot serve as the warranty certificate alone, but must be accompanied by valid invoices.

III. To the maximum extent permitted by law, this warranty does not cover, and a warranty claim cannot be made in respect of, any loss, damage, failure or defect relating to or arising from any one or more of the following:

1. Improper set up, installation or positioning of the product, or improper adjustment of settings or controls associated with the product;

2. Normal wear and tear of the product;

3. The product not being used or maintained in accordance with the manufacturer's instructions, specifications or recommendations;

4. Dismantling, repairing, servicing or other work carried out on or in relation to the product by any person other than an authorized repairer or authorized service provider;

5. Use of defective or incompatible parts or accessories in relation to the product;

6. Accident, theft, vandalism, misuse, abuse, negligence, collision with another object, operation of a computer virus, fire, flood, liquid spillage or ingress, earthquake, thunderstorm activity, acts of God or any other event or circumstance occurring in relation to the product which is beyond the reasonable control of TCL;

7. Defective pixels in the product where the visible number of those defective pixels is less than or equal to the acceptable number of defective pixels state in the manufacturer's specifications (or where there are no such specifications relating to defective pixels for the product, there are less than 12 defective pixels), it being acknowledged that a normal limitation of the technology for LCD and plasma panels (and the associated manufacturing processes) is for the screen to exhibit some bright dark or partially lit pixels;

8. Exposure of the product to excessive heat or moisture or other environmental conditions, including dust, rodents, insect, rust, corrosion, salt build-up or inadequate ventilation;

9. Viewing of an image or images on the display screen of the product for an extended period of time, it being acknowledged that permanent damage can occur to a product if still or repetitive images are left or used on the screen for an extended period of time;

DISCLAIMER

- 10. Electrical issues, including power surges, spikes or dips, or incorrect or fluctuations in voltage or current;
 - 11. Externally or other interference resulting from or caused by or to other products and/or sources;
 - 12. Incompatibility with or configuration of equipment connected to the product;
 - 13. Inability of the product to read or output damaged or copied media;
 - 14. Any error or failure in software applications, content and/or service provided by a person or entity (other than TCL) which are accessed through the product;
 - 15. Use of any other equipment, systems, utilities, services, applications, parts or other items not supplied or authorized by TCL;
 - 16. Cosmetic, structural or mounting items associated with the product, including brackets, wall mounts, shelves or doors; and
 - 17. Consumable (for example, bulbs, globes, batteries and cables) or lost parts or accessories associated with the product.
- IV. Without limiting the other provisions of this warranty and to the maximum extent permitted by law, this warranty will not apply, and TCL will not be liable under any warranty claim, in relation to the product if any one or more of the following apply:
- 1. The product was not purchased by you as a brand-new item from TCL or a retailer who at the time of purchase was authorized by TCL to sell the product to you;
 - 2. The serial number on the product has been damaged, modified or removed;
 - 3. Any internal hardware or software associated with the product has been accessed or tampered without TCL's prior authority; or
 - 4. You breach any provision of this warranty.
- V. Products beyond the warranty period or the scope of responsibility of warranty will be charged for corresponding services in accordance with the prescribed charge standard.

TECHNICAL SPECIFICATIONS OF THE COMPLETE DEVICE

Model	Audio output power	Rated Power	Visual image diagonal size	diagonal size (mmxmmxmm)	Weight (kg)
TM32N	10W+10W(±15%)	75W	32 inches	About 724.6×419.8×40	About 5.3
TM43N / TB43N	10W+10W(±15%)	130W	43 inches	About 963.4×552.3×27.9	About 10.3
TM55N / TB55N	10W+10W(±15%)	165W	55 inches	About 1231.8×703.3×27.9	About 16.7
TM65N / TB65N	10W+10W(±15%)	200W	65 inches	About 1452.3×827.3×27.9	About 24.9
TM75N / TB75N	10W+10W(±15%)	195W	75 inches	About 1675.0×953.1×29.8	About 33.0
TM85N	10W+10W(±15%)	220W	85 inches	About 1899.2×1079.7×31.9	About 50.65
TM98N	15W+15W(±15%)	290W	98 inches	About 2179.1×1249.4×84.3	About 67.5

- Supply voltage range: 100-240V ~ 50/60Hz (subject to the warning sign on the back)
- Operating environment:
 - Operating temperature: 0°C - 45°C Operating humidity: 20%RH - 80%RH
 - Storage temperature: -20°C - 60°C Storage humidity: 10%RH - 90%RH
- Altitude: ≤5000m (if the device is marked with an applicable altitude range, the specifications indicated on the device shall take precedence)
- Status display mode: screen display
- Adjustment status indicator: screen window menu
- Network interface: RJ45/10/100m. BASE
- USB 2.0: 5.0V --- 500mA
- USB 3.0: 5.0V --- 1A(limited to models with USB 3.0)

▣ IMPORTANT INFORMATION

WARNINGS



Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does

not require a safety connection to electrical earth.

Equipment without this symbol is a Class I electrical appliance. It shall be connected to a mains socket outlet with a protective earthing connection.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.



This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol indicates that the fuse may be in the neutral, and that the mains shall be disconnected to de-energize the phase conductors.

ESD regulation

This apparatus meets ESD performance criteria. In case the apparatus does not recover in Ethernet connection mode or USB playing mode due to electrostatic discharge, user intervention is required.

Battery safety information

- Use only the recommended AAA batteries for the remote control.
- Replace batteries with the same or equivalent type to avoid explosion risks.
- Do not expose batteries to excessive heat such as sunlight or fire.
- Remove batteries if the remote will not be used for an extended period.
- Dispose of used batteries responsibly at local recycling facilities in accordance with EU regulations.
- Open the battery cover.
- Insert two AAA batteries, ensuring correct polarity (+/-).
- Close the cover securely.

Examples that shall be considered include:

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas and a battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

Environmental and safety compliance

This product complies with EU Directives for product safety, including CE marking.

Follow all safety and installation instructions to ensure compliance with:

- EN 62368-1: Audio/video equipment safety standards.
- General Product Safety Regulation (GPSR) requirements.

Disclaimer

This product is CE marked and conforms to European safety standards. Failure to follow these safety guidelines may result in injury, damage to the product, or voided warranties.

Information for Users on Disposal of Old Equipment and Batteries [European Union]



Products



Pb
Battery

Notice:
The sign Pb
below the
symbol for
batteries
indicates that
this battery
contains lead.

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at their end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in

accordance with your national legislation and the Directive 2012/19/EU, 2006/66/EC and 2008/12/EC.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Business users]

If you wish to dispose of this product, please contact your supplier and check the terms and conditions of the purchase contract.

[Other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to dispose of these items, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical equipment and batteries.

Radio Information

- Bluetooth® transmitter frequency range: 2402 – 2480MHz
- Bluetooth® transmitter power: 5dBm (+/-2dB)
- 2.4G Wi-Fi transmitter frequency range: 2400 – 2483.5MHz
- 2.4G Wi-Fi transmitter power: 14dBm (+/-2dB) at 54Mbps
- 5G Wi-Fi transmitter frequency range:
 - Band 1: 5150 – 5250MHz
 - Band 2: 5250 – 5350MHz
 - Band 3: 5470 – 5725MHz
 - Band 4: 5725 – 5825MHz
- 5G Wi-Fi transmitter power: 14dBm (+/-2dB) at 54Mbps

	BE	BG	CZ	DK	DE	EE	IE
	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL
	PT	RO	SI	SK	FI	SE	UK (NI)

Declaration of Conformity



Hereby, TCL declares that the radio equipment type DIGITAL SIGNAGE is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.tcl.com. Choose the model name and go to DOWNLOADS.

Hereby, TCL declares that the radio equipment type DIGITAL SIGNAGE is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.iffalcon.com. Choose the model name and go to DOWNLOADS.



Applies to products intended for the UK market.

Hereby, TCL declares that the radio equipment type DIGITAL SIGNAGE is in compliance with the relevant UK statutory requirements. The full text of the UK declaration of conformity is available at the following internet address:

www.tcl.com. Choose the model name and go to DOWNLOADS.

UK Importer: TCL Electronics UK Limited,

1 Brunel Way, Slough,

United Kingdom, SL1 1FQ

Statement of Compliance:

2023 No. 1007 The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023

The product is in compliance with the following standard(s) or normative document(s):

ETSI EN 303 645 V2.1.1:2020-06

Provision 5.1-1

Provision 5.1-2

Provision 5.2-1

Provision 5.3-13

The full text of the UK declaration of conformity is available at the following internet address: www.tcl.com.

Choose the model name and go to DOWNLOADS.

OSS Notice

This product contains software that is licensed under free or open-source licenses. You may obtain a copy of the complete corresponding source code for a period of three years after the last shipment of this product by visiting: www.tcl.com/opensource.

This product uses the GPL (Version 2 and 3) and LGPL (version 2.1) and MPL (version 1.1).

To send inquires and requests for questions regarding open source, contact nearest TCL office.

This product uses some software programs which are distributed under the Independent JPEG Group.

This product uses some software programs which are distributed under the libpng Project.

This product uses some software programs which are distributed under the Freetype Project.

This product uses some software programs which are distributed under the zlib Project.

This product uses some software programs (libxml2, curl, expat, c-areas) which are distributed under the MIT.

This product uses CyberLink for C which is distributed under the Open Source Project.

This product uses openssl, xerces which is distributed under the Apache License Project.

GPL software: Linux Kernel, glib, libiconv, gcc libgcc, gcc libstdc++, u-Boot loader, ffmpeg, util-linux-ng, e2fsprogs, wget, iptables

LGPL software: DFB (DirectFB), gstreamer, gstplugins-base, gst-plugins-good, gst-plugins-bad, gstplugins-ugly, gst-ffmpeg, glibc, wpa_supplicant

BSD software: webp, mng, uriparser

GNU software: dosfstools

Energy star compliance



As an ENERGY STAR Partner, TCL Commercial Information Technology(Huizhou) has followed the EPAS enhanced product qualification and certification process to ensure that the Products marked with the ENERGY STAR logo are ENERGY STAR qualified per the applicable ENERGY STAR guidelines for energy efficiency. The logo appear within the display settings dialog window on all ENERGY STAR qualified Signage Display.

The ENERGY STAR program for Signage Display was created by EPA to promote energy efficiency and reduce air pollution through more energy-efficient equipment in retail or department stores, restaurants, museums, hotels, outdoor venues, airports, conference rooms or classrooms. One way that a product can achieve this goal is by using a power management feature to reduce power consumption when the product is not in use.

For TM32N, TM43N, TM55N, TM65N, TM75N, TM85N, TM98N, By default, the panel will also go in to sleep mode without user action after 60 minutes of inactivity.

In the event that brightness settings or power mode settings are changed by the user, energy consumption of the panel may increase beyond the limits required for ENERGY STAR certification.

Additional information on the ENERGY STAR program and its environment benefits are available on the EPA ENERGY STAR website at <http://www.energystar.gov>

TCL KING ELECTRICAL APPLIANCES (HUIZHOU) CO., LTD
ZHONGKAI NEW HIGH-TECH INDUSTRIES, DEVELOPMENT ZONE SECTION 78,
HUIZHOU, GUANGDONG, CHINA